

Autonics

DUAL INDICATOR TEMPERATURE CONTROLLER

TCN4 SERIES

INSTRUCTION MANUAL



Thank you for choosing our Autonics product.
Please read the following safety considerations before use.

Safety Considerations

- ※Please observe all safety considerations for safe and proper product operation to avoid hazards.
- ※Safety considerations are categorized as follows.
- Warning** Failure to follow these instructions may result in serious injury or death.
- Caution** Failure to follow these instructions may result in personal injury or product damage.
- ※The symbols used on the product and instruction manual represent the following
- ⚠ symbol represents caution due to special circumstances in which hazards may occur.

Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crane/disaster prevention devices, etc.)
Failure to follow this instruction may result in personal injury, fire or economic loss.
- Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
- Install on a device panel to use.**
Failure to follow this instruction may result in fire or electric shock.
- Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in fire or electric shock.
- Check 'Connections' before wiring.**
Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire or electric shock.

Caution

- When connecting the power input and relay output, use AWG 20(0.50mm²) cable or over and tighten the terminal screw with a tightening torque of 0.74-0.90N·m.**
When connecting the sensor input and communication cable without dedicated cable, use AWG 28-16 cable and tighten the terminal screw with a tightening torque of 0.74-0.90N·m.
Failure to follow this instruction may result in fire or malfunction due to contact failure.
- Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.
- Use dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in fire or electric shock.
- Keep metal chip, dust, and wire residue from flowing into the unit.**
Failure to follow this instruction may result in fire or product damage.

Ordering Information

T	CN	4	S	-2	4	R	-P
Wiring method							
No-mark	Bolt wiring method						
P	Connector plug connection method ^{※1}						
Control output							
R	Relay contact + SSR drive output ^{※2}						
Power supply							
2	24VAC 50/60Hz, 24-48VDC						
4	100-240VAC 50/60Hz						
Sub output							
2	Alarm1 + Alarm2 output						
Size							
S	DIN W48 × H48mm						
M	DIN W72 × H72mm						
H	DIN W48 × H96mm						
L	DIN W96 × H96mm						
Digit							
4	9999 (4 digit)						
Setting type							
CN	Dual display type, set by touch switch						
Item							
T	Temperature controller						


- ※1: Only for TCN4S model.
- ※2: In case of the AC voltage model, SSR drive output method (standard ON/OFF control, cycle control, phase control) is available to select.
- ※The above specifications are subject to change and some models may be discontinued without notice.
- ※Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage).

Specification

Series	TCN4S	TCN4M	TCN4H	TCN4L
Power supply	AC Power 100-240VAC~ 50/60Hz AC/DC Power 24VAC~ 50/60Hz, 24-48VDC=			
Allowable voltage range	90 to 110% of rated voltage			
Power consumption	AC Power Max. 5VA(100-240VAC 50/60Hz) AC/DC Power Max. 5V(24VAC 50/60Hz), Max. 3W(24-48VDC)			
Display method	7 segment (PV: red, SV: green), other display part(green, red) LED method			
Character size	PV(W×H) 7.0×15.0mm SV(W×H) 5.0×9.5mm	9.5×20.0mm 7.5×15.0mm	7.0×14.6mm 6.0×12.0mm	11.0×22.0mm 7.0×14.0mm
Input type	RTD TC	DIN Pt100Ω, Cu50Ω (Allowable line resistance max.5Ω per a wire)	K(CA), J(IC), L(IC), T(CC), R(PR), S(PR)	
Display accuracy	RTD At room temperature(23°C ± 5°C): (PV ± 0.5% or ± 1°C, select the higher one) ± 1 digit TC Out of room temperature range: (PV ± 0.5% or ± 2°C, select the higher one) ± 1 digit For TCN4S-□-P, add ± 1°C by accuracy standard.			
Control output	Relay 250VAC~ 3A 1a SSR 12VDC=±2V 20mA Max.			
Alarm output	AL1, AL2 Relay: 250VAC~ 1A 1a			
Control method	ON/OFF control, P, PI, PD, PID control			
Hysteresis	1 to 100°C/F (0.1 to 50.0°C/F)			
Proportional band(P)	0.1 to 999.9°C/F			
Integral time(I)	0 to 9999 sec.			
Derivative time(D)	0 to 9999 sec.			
Control period(T)	0.5 to 120.0 sec.			
Manual reset	0.0 to 100.0%			
Sampling period	100ms			
Dielectric strength	AC power 2000VAC 50/60Hz 1min.(between input terminal and power terminal)			
	AC/DC power 1000VAC 50/60Hz 1min.(between input terminal and power terminal)			
Vibration	0.75mm amplitude at frequency of 5 to 55Hz in each X, Y, Z direction for 2 hours			
Relay life cycle	Mechanical	OUT: Over 5,000,000 times, AL1/2: Over 5,000,000 times		
	Electrical	OUT: Over 200,000 times(250VAC 3A resistive load) AL1/2: Over 300,000 times(250VAC 1A resistive load)		
Insulation resistance	Min. 100MΩ(at 500VDC megger)			
Noise	Square-wave noise by noise simulator(pulse width 1μs) ±2KV R-phase and S-phase			
Memory retention	Approx. 10 years (when using non-volatile semiconductor memory type)			
Environ-ment	Ambient temp. -10 to 50°C, Storage: -20 to 60°C			
	Ambient humi. 35 to 85%RH, Storage: 35 to 85%RH			
Insulation type	Double insulation or reinforced insulation (mark: □, dielectric strength between the measuring input part and the power part : AC power 2kV, AC/DC power 1kV)			
Approval	CE, c, US, EAC			
Weight	Approx. 147g (approx. 100g)	Approx. 203g (approx. 133g)	Approx. 194g (approx. 124g)	Approx. 275g (approx. 179g)

- ※1: ○ At room temperature(23°C±5°C)
- Below 200°C of thermocouple R(PR), S(PR) is (PV ± 0.5% or ± 3°C, select the higher one) ± 1 digit
- Over 200°C of thermocouple R(PR), S(PR) is (PV ± 0.5% or ± 2°C, select the higher one) ± 1 digit
- Thermocouple L (IC), RTD Cu50Ω is (PV ± 0.5% or ± 2°C, select the higher one) ± 1 digit
○ Out of room temperature range
- Below 200°C of thermocouple R(PR), S(PR) is (PV ± 1.0% or ± 6°C, select the higher one) ± 1 digit
- Over 200°C of thermocouple R(PR), S(PR) is (PV ± 0.5% or ± 5°C, select the higher one) ± 1 digit
- Thermocouple L(IC), RTD Cu50Ω is (PV ± 0.5% or ± 3°C, select the higher one) ± 1 digit
For TCN4S-□-P, add ± 1°C by accuracy standard.
- ※2: The weight includes packaging. The weight in parentheses is for unit only.
- ※ Environment resistance is rated at no freezing or condensation.

Unit Description

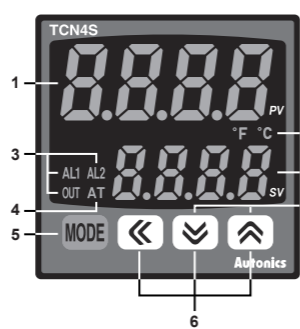

- Present temperature (PV) display (Red)**
1) RUN mode: Present temperature (PV) display
2) Parameter setting mode: Parameter display
- Set temperature (SV) display (Green)**
1) RUN mode: Set temperature (SV) display
2) Parameter setting mode : Parameter setting value display
- Control/Alarm output display indicator**
1) OUT: It turns ON when the control output is ON. During SSR drive output type in CYCLE/ PHASE control, this indicator turns ON when MV is over 3.0%.
2) AL1/AL2: It turns ON when the alarm output is ON.
- Auto tuning indicator**
AT indicator flashes by every 1 sec during operating auto tuning.
- MODE key**
Used when entering into parameter groups, returning to RUN mode, moving parameter, and saving setting values.


- Adjustment**
Used when entering into set value change mode, digit moving and digit up/down.
- Digital input key**
Press and keys for 3 sec. to operate the set function (RUN/STOP, alarm output reset, auto tuning) in digital input key [di - t].
- Temperature unit (°C/F) indicator**
It shows current temperature unit.

Input Sensor and Temperature Range


Input sensor	Display	Temperature range(°C)	Temperature range(°F)
K(CA)	℄C RH	-50 to 1200	-58 to 2192
	℄C RL	-50.0 to 999.9	-58.0 to 999.9
	Ji CL	-30 to 800	-22 to 1472
	Ji CH	-30.0 to 800.0	-22.0 to 999.9
	Li CL	-40 to 800	-40 to 1472
	Li CH	-40.0 to 800.0	-40 to 999.9
T(CC)	℄C CL	-50 to 400	-58 to 752
	℄C CL	-50.0 to 400.0	-58.0 to 752.0
	rPr	0 to 1700	32 to 3092
S(PR)	sPr	0 to 1700	32 to 3092
	dPtH	-100 to 400	-148 to 752
RTD	dPtL	-100.0 to 400.0	-148.0 to 752.0
	CU5H	-50 to 200	-58 to 392
	CU5L	-50.0 to 200.0	-58.0 to 392.0

Dimensions

TCN4S Series

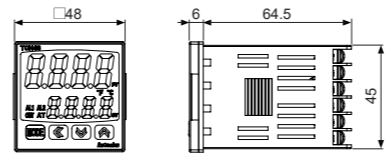


TCN4H Series

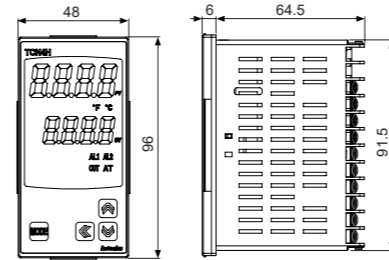


Bracket


TCN4S Series

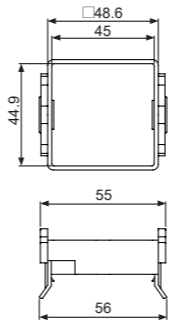


TCN4M, TCN4H, TCN4L Series

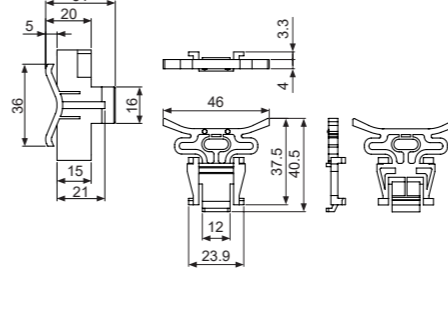


TCN4S-□-P

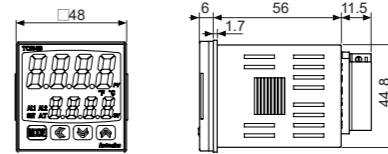

TCN4L Series

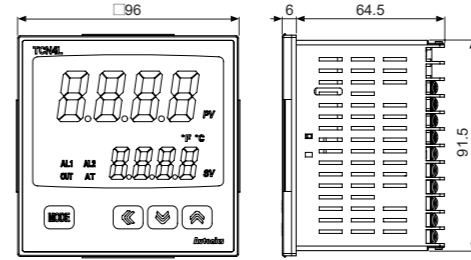


Panel cut-out




Series	A	B	C	D
TCN4S	Min. 65	Min. 65	45°	45°
TCN4M	Min. 90	Min. 90	68°	68°
TCN4H	Min. 65	Min. 115	45°	92°
TCN4L	Min. 115	Min. 115	92°	92°

TCN4M Series

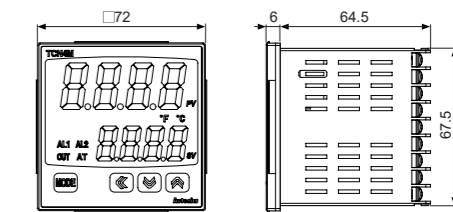


Terminal cover(sold separately)

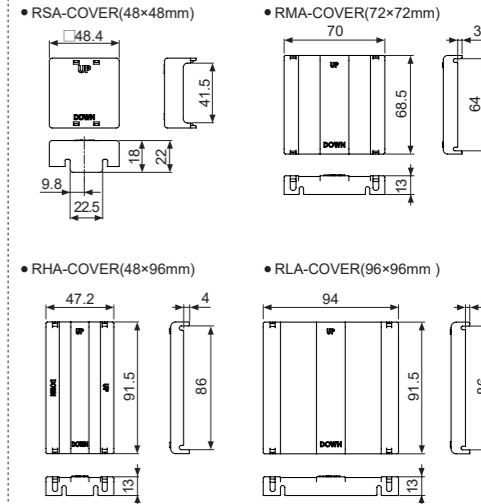


Connections


1)TCN4S Series

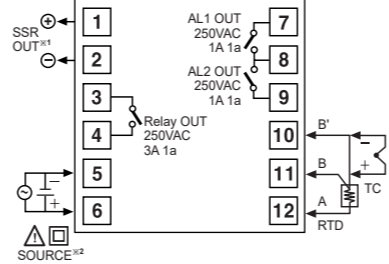


3)TCN4M Series

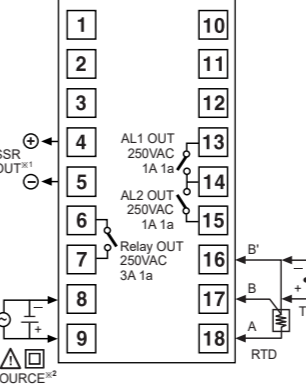

2)TCN4S-□-P

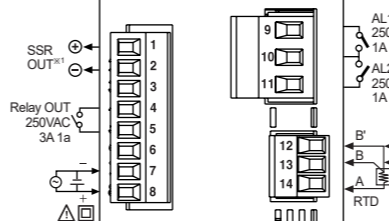


4)TCN4H/L Series

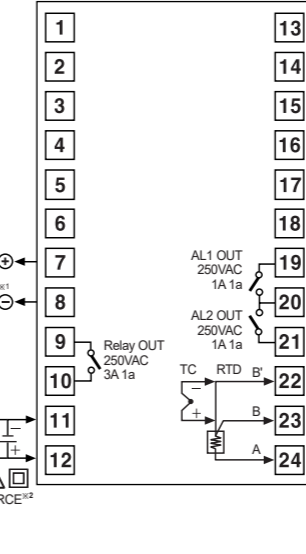

- ※TCN4 Series has selectable control output; Relay output, and SSR drive output. AC/DC voltage type does not have SSRP function.
- ※1: 12VDC±2V 20mA Max.
- ※2: AC voltage type: 100-240VAC 5VA 50/60Hz
AC/DC voltage type: 24VAC 5VA 50/60Hz
24-48VDC 3W
- ※Use crimp terminals or terminals of size specified below. (unit: mm)

Parameter Groups

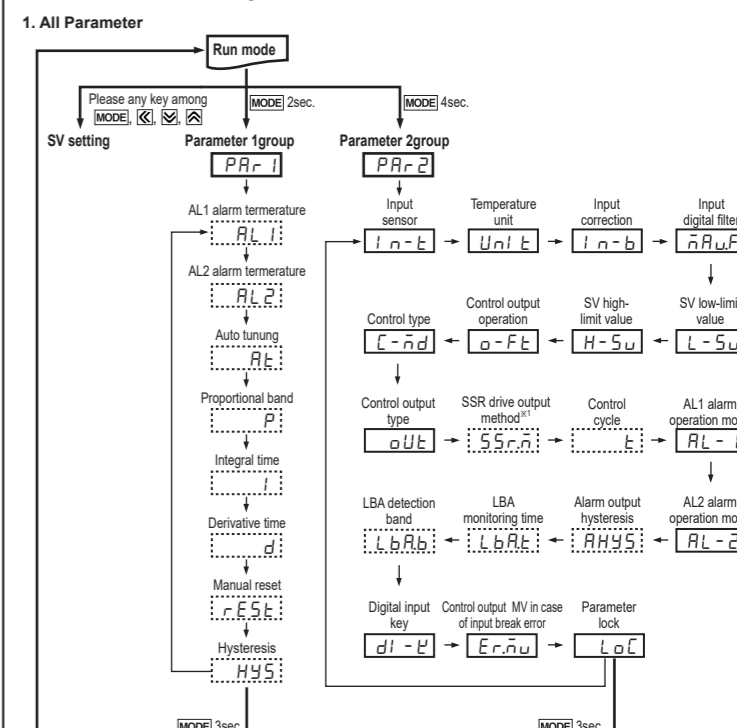

- ※ Press **MODE** key over 3 sec in any parameter group, it saves the set value and returns to RUN mode. (Exception: Press **MODE** key once in SV setting group, it returns to RUN mode).
- ※ If no key entered for 30 sec., it returns to RUN mode automatically and the set value of parameter is not be saved.
- ※ Press **MODE** key again within 1 sec. after returning to RUN mode, it advances of the first parameter of previous parameter group.
- ※ Press **MODE** key to move next parameter.
- ※ Parameter marked in **□** might not be displayed depending on other parameter settings.
- ※ Set parameter as "Parameter 2 group → Parameter 1 group → Setting group of set value" order considering parameter relation of each setting group.
- ※1: It is not displayed for AC/DC power model (TCN4-□-22R).

